



P43, Q43 & R43 PILLOW BLOCK BEARING MOUNTING

CAPACITY RANGE - POUND													
NOMINAL	0-4	0-8	0-13	0-20	0-30	0-50	0-90	0-140	0-200	0-300	0-500		
CODE	L*	M*	N	P	S	Т	U	W	X	Y	Z		

· Tensioncells in this range supplied for shaft sizes up to maximum 3/4" diameter unless approved by factory.

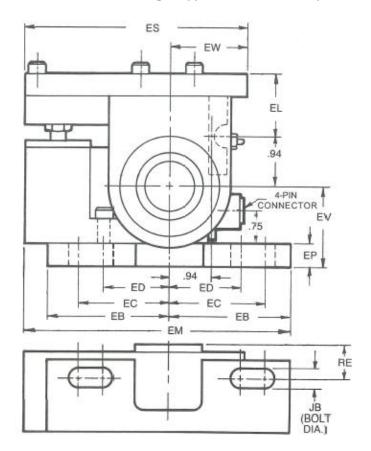

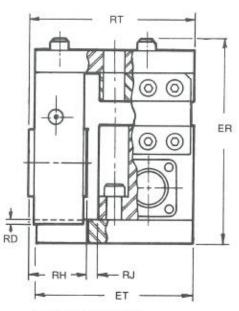

W₁ UNIT SHOWN HERE. W₂ UNIT IS APPLIED AT THE OPPOSITE END OF ROLL.

W₁ UNIT CLAMPS THE SHAFT WHILE W₂ UNIT ALLOWS FOR TEMPERATURE EXPANSION OF THE SHAFT. BOTH UNITS HAVE SELF-ALIGNING FEATURE.

DIMENSIONS - INCHES														
Code	le JB EB EC ED EL EM EP ER ES							ET	EV	EW				
P43	0.38	2.75	2.13	1.56	1.38	6.00	0.50	4.50	5.00	3.50	1.94	1.75		
Q43	0.50	3.75	3.13	2.06	1.38	7.50	0.50	4.50	5.00	3.50	1.94	1.75		
R43	0.50	3.75	3.00	2.50	1.50	7.50	0.75	4.75	5.25	4.00	2.19	2.00		

						SH	AFT DIAME	TERS - INC	HES								
Inches	es 1/2 9/16 5/8 11/16 3/4 7/8 15/16 1 1-1/16 1-1/8 1-3/16 1-1/4 1-5/16										1-5/16	1-3/8	1-7/16				
Code	08	09	10	11	12	14	15	16	17	18	19	20	21	22	23		
P43	AVAILABLE									NOT AVAILABLE							
Q43		ALL DIAMETERS AVAILABLE															
R43		ALL DIAMETERS AVAILABLE															
RD	0.06 0.31																
RE	0.81									0.97 1.06							
RH			1.31				1.38		1.53 1.69								
RJ	0.31								0.25 0.19								
RT	3.88									4.03		4.13					



MODEL P43, Q43, & R43 Capacity and Dimensions

The information contained in this document is subject to change without notice. Comptrol has made effort to ensure the accuracy and completeness of the descriptions and procedures discussed in this document. Failure to comply with these procedures may result in personal injury, or damage to the Comptrol product or the equipment used in conjunction with it.

Comptrol assumes no liability for incidental or consequential personal or equipment damages arising from the use of this document, the software and hardware described, or failure to comply with the procedures contained in this document. Note that protective covers or guarding may not be shown in some illustrations to provide a clearer view of specific components or assemblies. All protective covers and guarding must be installed before operating the unit. Reproduction, copying, or the disclosure to any third party for any unauthorized purpose of the contents or software contained or described in this document is prohibited with written authorization form Comptrol. Violators will be prosecuted.



37400 Lakeland Blvd. Eastlake, OH 44095 Phone: (216) 587-5200 Email: info@comptrolinc.com

www.comptrolinc.com